



## Roam4Less™ Quick Guide

One World. One Phone.™

Congratulations on choosing Roam4Less.  
In a few easy steps, you will be able to place and receive phone calls when you travel for a fraction of the rates other mobile phone carriers charge.

### Setting Up Your Phone - 4 Simple Steps

Note: Step #1 pertains to customers who purchased only a SIM card and wish to install it in their own phone model. **Important: your phone must be unlocked and be able to access the GSM frequencies in the countries you're visiting. Check our website or call our Help Line for more information.**

If you have purchased a Roam4Less World Phone, you can skip to step #2 below.

#### Step # 1

Install the SIM card as per your phone's instructions.

#### Step # 2

Turn on your phone.

#### Step # 3

Enter PIN code [1111] if requested.

#### Step # 4

In less than 2 minutes, you will automatically be registered with the local GSM network.

Note: Steps 3 and 4 must be repeated each time you turn on the phone.

Troubleshooting: If your phone does not connect to a network after two minutes, try re-installing the SIM card and restarting the phone. If it still doesn't work (or reception is poor), you will need to manually select a local network. Consult your phone's instruction booklet.

### Placing Call

1. Dial the complete international number (Intern'l prefix, country code, area code and local number), for example dial 001.212.555.4444 to call North America or dial 0044.207.555.5555 to call the UK.

**IMPORTANT:** You must include the International prefix (00 or +)

2. Press the SEND key and within 10 seconds your phone will ring, signaling that the call is ready to be put through.

3. Press SEND again and your phone will ring the requested party.

### Receiving Calls

Answer the phone exactly the way you normally do.

### Voice Mail

To set up and to access your voice mail, dial 0032486191996 from your Roam4Less Phone and follow the instructions.



Roam4Less™  
One World. One Phone.™

## Text Messaging (SMS)

### Sending Text messages

**IMPORTANT!** Dial 00+Country Code+Area Code+Phone Number

- When sending an SMS to another **Roam4Less phone**, simply dial **00** before the 32489.... number.  
For example: 0032489490000.
- When sending an SMS to another cell phone with a **North American** number, dial **001 plus area code plus number**.
- When sending an SMS to an **international** number, dial **00 plus country code plus number**. For example: **0044 (country code) 693 (area code) 4546677 (phone number)**.

### Receiving Text messages

Roam4Less SMS service is processed by state-of-the-art servers located overseas. You can only receive text messages on your assigned SMS number. This number will be displayed on your outgoing SMS. Incoming SMS is free everywhere you roam with Roam4Less.

### Did You Know?

1. You can have your incoming calls to your home, office and cell phone forwarded to your Roam4Less phone. Contact your service provider for more details.
2. You can test that your phone is working by calling your Roam4Less phone number from any phone. If your phone rings within 10 seconds, you know it is working.

(Please note that there is no charge until you answer the call)

### Roam4Less™ Customer Service

From North America: 1.877.44ROAM4

From everywhere else: 1.416.481.ROAM (7626)

24/7 support via Email: [support@roam4less.com](mailto:support@roam4less.com)

Website: [www.roam4less.com/support](http://www.roam4less.com/support)

Please have your UserID, Roam4Less phone number, or the email address associated with the account handy.

